




# Operation and Maintenance Instructions

Form No.	Section	Issue Date	Rev. Date
F-1031	2317	07/12/02	02/08/10

## Overheat Protection Manager (OPM)

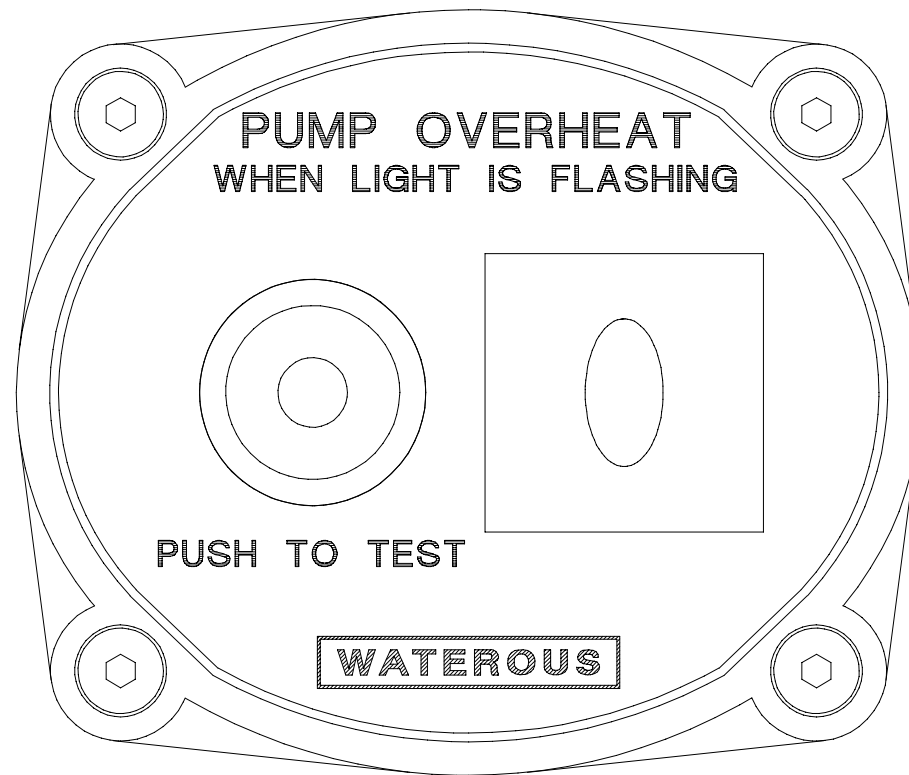

### ***Overheat Protection Manager (OPM)***

The Overheat Protection Manager (OPM) acts as a safety device by releasing hot water to the ground or back to the water tank from the discharge area of the pump. For installation, refer to instruction F-1031, Section 3015.

### ***Maintenance***

Check the electrical circuit by pressing the test button located on the panel plate every 100 hours of pump operation or every six months, whichever comes first.

If the light does not flash, check all wire connections and re-test. If the light still does not flash, the light bulb (units built prior to 4/17/2006) or control panel (units built after 4/17/2006) may need replacement. When optional audible alarm is used and the test button on the panel is pressed, light will flash but alarm will not sound. Contact the Waterous Company service department for repair parts.