

| Document Number | Issue Date | Rev. Date |
|-----------------|------------|-----------|
| SPL81892 | 07/92 | 2/16/17 |

WRX Transmission Service Parts List


Index:

| Item | See Pages |
|---------------------------|-----------|
| Driveline Components | 2 - 3 |
| Case and Shift Components | 4 - 7 |
| Cross-Section Views | 8 - 9 |

Driveline Components

| REF NO. | DESCRIPTION |
|---------|---------------------------------|
| T20 | Impeller Shaft Spacer |
| T21 | Impeller Shaft Spacer |
| T23 | Shift Collar |
| T27 | Bearing Lock Nut |
| T31 | Bearing Lock Washer |
| T43 | Double Row Ball Bearing |
| T44 | Single Row Ball Bearing |
| T48 | Chain, 92 Pitch |
| T49 | Driven Sprocket, 23T |
| T52 | Drive Sprocket, 71T |
| T54 | Connecting Pin Set |
| T60 | Heavy Spirol Pin, 1/8 x 1/4 in. |
| T61 | Drive Shaft Spacer |
| T62 | Oil Seal Sleeve |
| T63 | Tachometer Drive Gear |


| REF NO. | DESCRIPTION |
|---------|-----------------------------------------------|
| T64 | Coupling Shaft Spacer |
| T66 | Drive Shaft |
| T67 | Coupling Shaft |
| T71 | Needle Bearing |
| T73 | Castle Nut, 1-1/4 in. |
| T74 | Cotter Pin, 1/8 x 1-3/4 in. |
| T76 | Retaining Ring |
| T77 | Plain Washer, 1-1/4 in. |
| T78 | Single Row Ball Bearing |
| T80 | Oil Flinger Assembly (Includes T83, T84, T85) |
| T83 | Flinger |
| T84 | Flinger Hub |
| T85 | Socket Hd Screw, 10-24 x 3/8 in. |
| T90 | Drive Shaft Spacer |
| | |

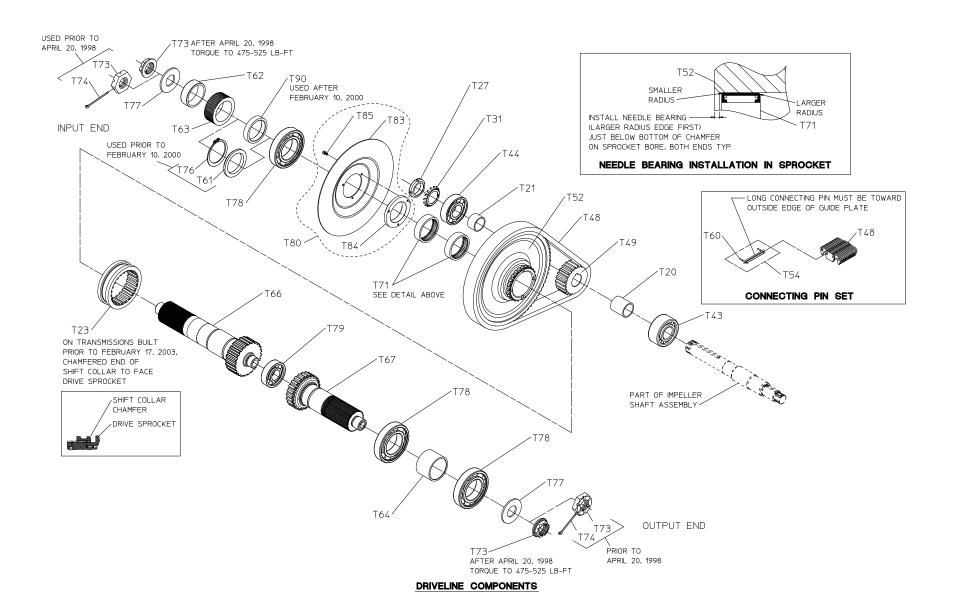

Case and Shaft Components

| REF NO. | DESCRIPTION |
|---------|-----------------------------|
| T3 | Adjusting Screw |
| T7 | Shifter Shoe Stud |
| T8 | Shift Shoe |
| Т9 | Adjusting Screw Retainer |
| T10 | Shift Shaft |
| T12 | Pivot Pin |
| T16 | Locking Arm |
| T18 | Shift Actuating Lever |
| T19 | Sector Gear |
| T22 | Shift Fork Assembly |
| T30 | Sleeve Bearing |
| T33 | Cotter Pin, 1/8 x 1-1/4 in. |


| REF NO. | DESCRIPTION |
|---------|-----------------------------------|
| T34 | O-ring, 3/8 x 1/2 in. |
| T40 | Pipe Plug, 3/4 NPT |
| T41 | Pipe Plug, 1 NPT |
| T47 | Heavy Spirol Pin, 3/8 x 1-3/8 in. |
| T53 | Chain Case Subassembly |
| T59 | Dowel Pin |
| T91 | Set Screw, 3/8 x 3/8 in. |
| T92 | Pipe Plug, 1/4 NPT |
| T93 | Hose Assy, 1/2 NPT x 26 in. |
| T96 | Reducing Bushing, 3/4 x 1/2 |
| T97 | Cable Clamp, 1 in. |
| | |

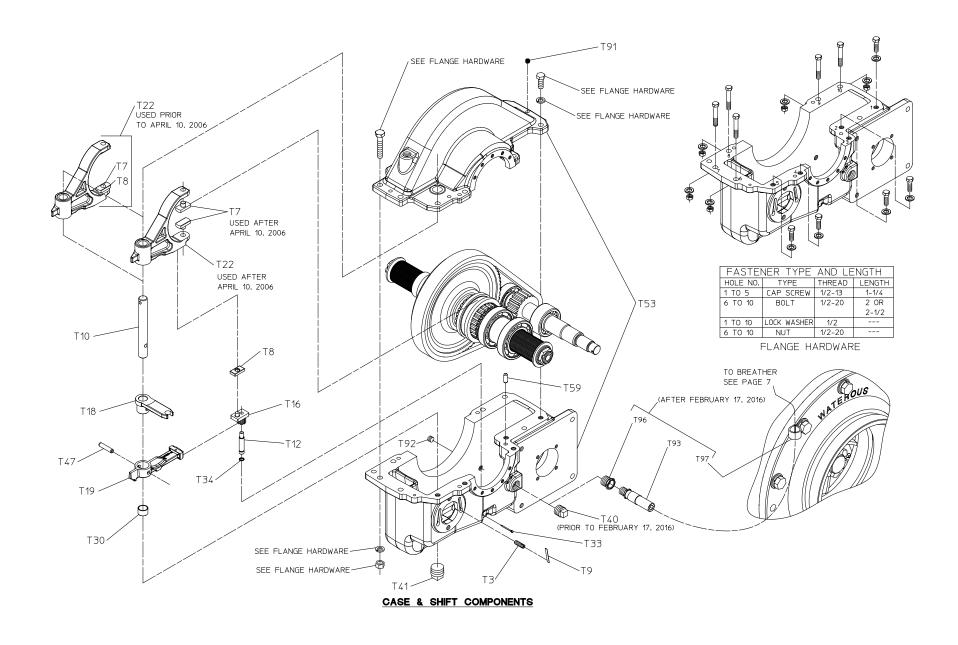

Case and Shift Components

| REF NO. | DESCRIPTION |
|---------|------------------------------------------------|
| T1 | Shift Lock Spring |
| T2 | Spring Housing |
| T4 | Gasket |
| Т6 | Pack Shim |
| T11 | Sleeve Bearing |
| T13 | Pack Shim |
| T14 | Threaded Seal Hex Hd Screw, 3/8-16 x 1-1/4 in. |
| T15 | Shift Arm |
| T17 | Oil Seal Housing |
| T24 | Gasket |
| T25 | Impeller Shaft Cover |
| T26 | Gasket Kit |
| T28 | Magnetic Drain Plug, 3/4 NPT |
| T29 | Breather, 1/2 NPT |
| T32 | Hex Hd Screw, 3/8-16 x 1-1/4 in. |
| T35 | O-ring, 7/8 x 1 in. |
| T36 | O-ring, 2-7/8 x 3-1/8 in. |
| T37 | O-ring, 4-3/4 x 5 in. |

| REF NO. | DESCRIPTION |
|---------|------------------------------------|
| T38 | Oil Seal, 1-5/8 x 2.506 |
| T39 | Lock Washer, 3/8 in. |
| T45 | Heavy Spirol Pin, 1/4 x 1-1/4 in. |
| T46 | Heavy Spirol Pin, 5/16 x 1-3/8 in. |
| T65 | Housing Assembly |
| T68 | Coupling Shaft Housing |
| T69 | Tachometer Sleeve |
| T70 | Tachometer Bushing |
| T72 | Tachometer Driven Gear |
| T75 | Oil Seal, 2-3/4 x 3-1/2 in. |
| T81 | Screw, 1/2-13 x 1-1/4 in. |
| T82 | Lock Washer, 1/2 in. |
| T86 | Pipe Nipple, 1/2 x 4 in. |
| T87 | Pipe Coupling, 1/2 in. |
| T88 | Oil Seal, 3-1/2 x 4-3/8 in. |
| T93 | Hose Assembly, 1/2 NPT x 26 in. |
| T94 | Pipe Nipple, 1/2 x 1-1/8 in. |
| T95 | Pipe Tee, 1/2 NPT |

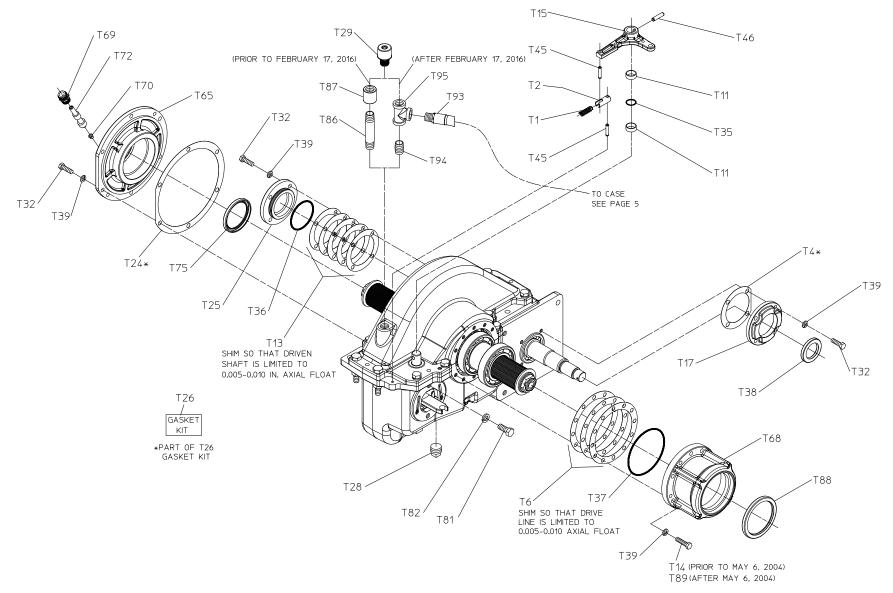

CASE & SHIFT COMPONENTS

Cross-Section Views

| REF NO. | DESCRIPTION |
|---------|----------------------------------|
| T1 | Shift Lock Spring |
| T2 | Spring Housing |
| T4 | Gasket |
| Т6 | Pack Shim |
| T7 | Shifter Shoe Stud |
| Т8 | Shift Shoe |
| T10 | Shift Shaft |
| T11 | Sleeve Bearing |
| T12 | Pivot Pin |
| T13 | Pack Shim |
| T15 | Shift Arm |
| T16 | Locking Arm |
| T17 | Oil Seal Housing |
| T18 | Shift Actuating Lever |
| T19 | Sector Gear |
| T20 | Impeller Shaft Spacer |
| T21 | Impeller Shaft Spacer |
| T22 | Shift Fork Assembly |
| T23 | Shift Collar |
| T24 | Gasket |
| T25 | Impeller Shaft Cover |
| T26 | Gasket Kit |
| T27 | Bearing Lock Nut |
| T28 | Magnetic Drain Plug, 3/4 NPT |
| T30 | Sleeve Bearing |
| T31 | Bearing Lock Washer |
| T32 | Hex Hd Screw, 3/8-16 x 1-1/4 in. |
| T33 | Cotter Pin, 1/8 x 1-1/4 in. |
| T34 | O-ring, 3/8 x 1/2 in. |
| T35 | O-ring, 7/8 x 1 in. |

| REF NO. | DESCRIPTION |
|---------|------------------------------------------------------|
| T36 | O-ring, 2-7/8 x 3-1/8 in. |
| T37 | O-ring, 4-3/4 x 5 in. |
| T38 | Oil Seal, 1-5/8 x 2.506 |
| T39 | Lock Washer, 3/8 in. |
| T41 | Pipe Plug, 1 NPT |
| T43 | Double Row Ball Bearing |
| T44 | Single Row, Ball Bearing |
| T45 | Heavy Spirol Pin, 1/4 x 1-1/4 in. |
| T46 | Heavy Spirol Pin, 3/8 x 1-3/4 in. |
| T47 | Heavy Spirol Pin, 3/8 x 1-3/4 in. |
| T48 | Chain, 92 Pitch |
| T49 | Driven Sprocket, 23T |
| T52 | Drive Sprocket, 71T |
| T53 | Chain Case Subassembly |
| T63 | Tachometer Drive Gear |
| T64 | Coupling Shaft Spacer |
| T65 | Housing Assembly |
| T66 | Drive Shaft |
| T67 | Coupling Shaft |
| T68 | Coupling Shaft Housing |
| T73 | Castle Nut, 1-1/4 in. |
| T75 | Oil Seal, 2-3/4 x 3-1/2 in. |
| T77 | Plain Washer, 1-1/4 in. |
| T78 | Single Row Ball Bearing |
| T79 | Single Row Ball Bearing |
| T80 | Oil Flinger Assembly |
| T88 | Oil Seal, 3-1/2 x 4-3/8 in. |
| T89 | Hex Hd Screw with Thread Sealant, 3/8-16 x 1-1/2 in. |
| T90 | Drive Shaft Spacer |
| | |

