



 Document Number
 Issue Date
 Rev. Date

 SPL82618
 10/15/02
 06/03/20

2-1/2 in. Standard Discharge Valve Assembly with Manual Rotary Actuator Service Parts List

Components	See Page
2-1/2 in. Standard Ball Valve	2
Cables and Panel Components	3
Available Repair Subassemblies	4

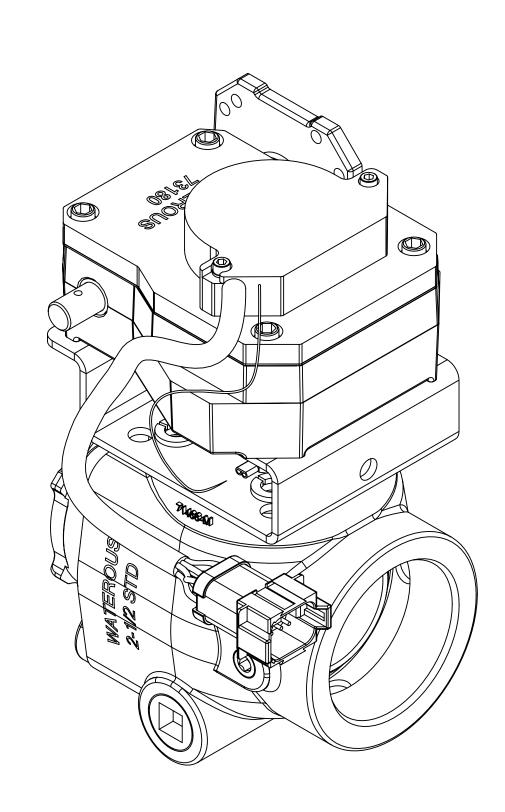


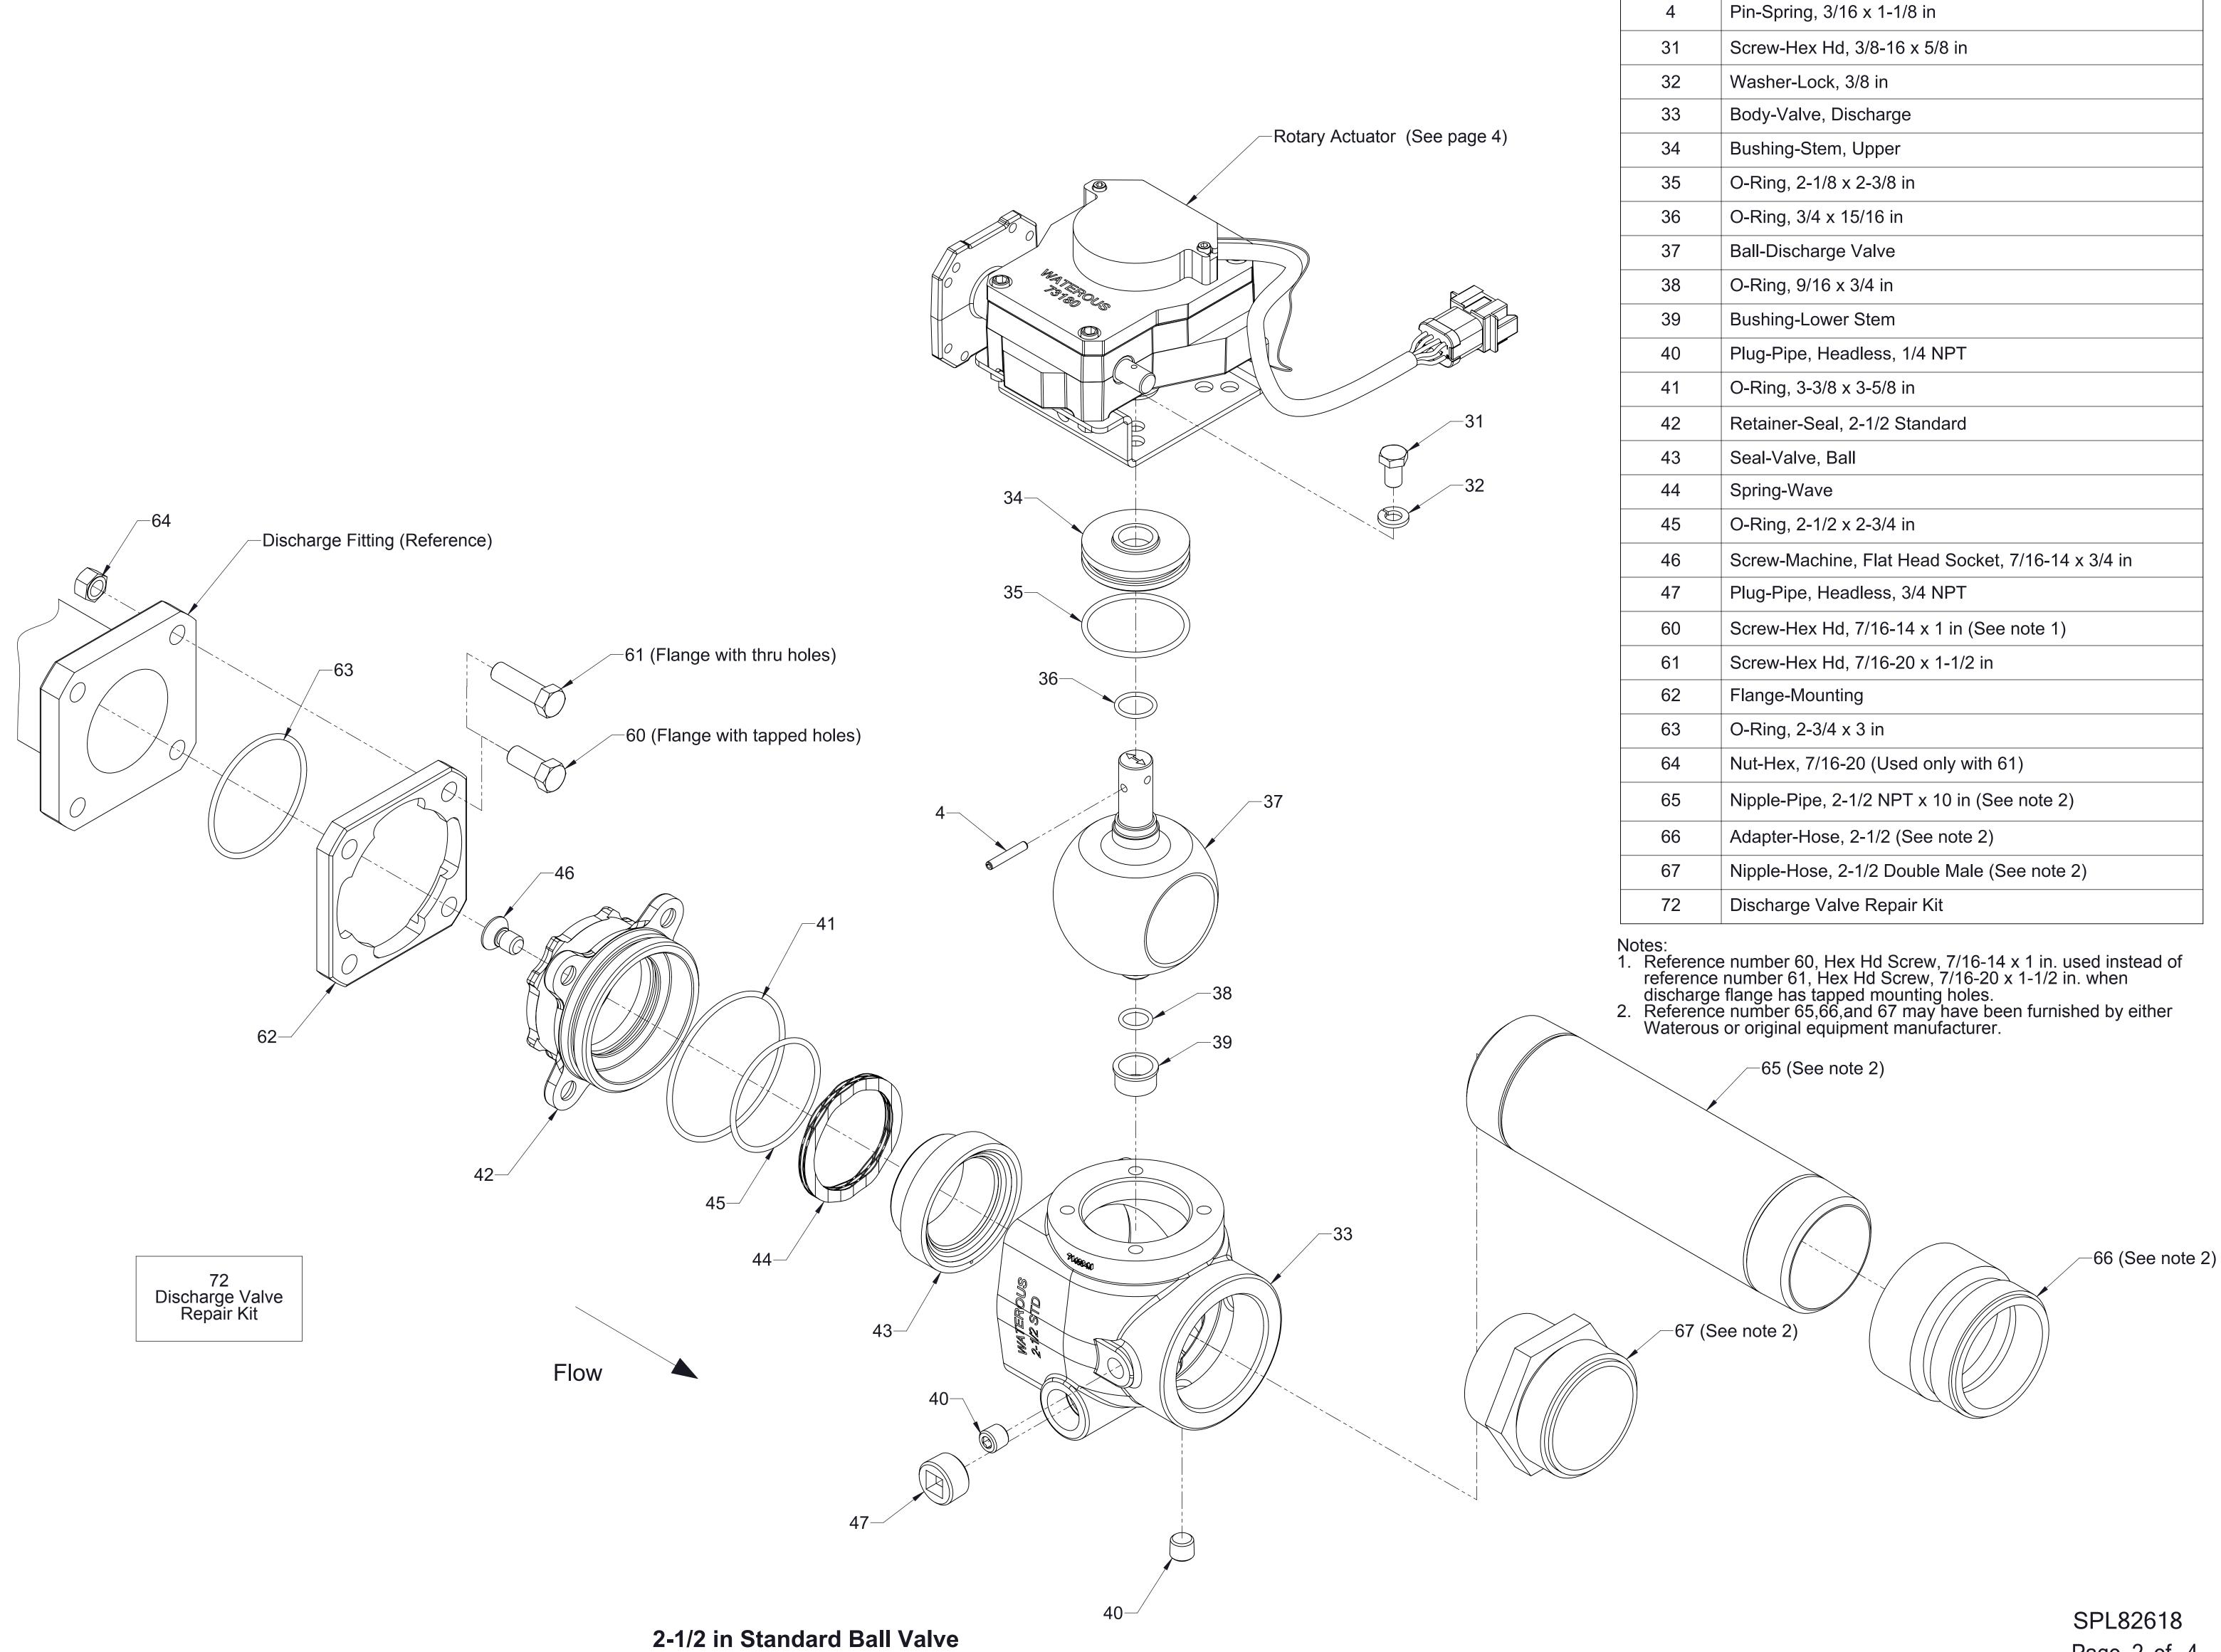

Page 2 of 4

Description


Ref No.

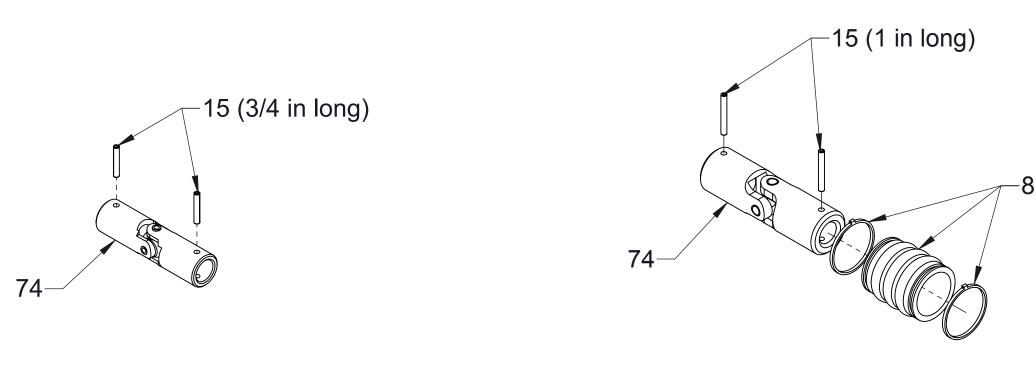

Standard Configuration

Optional Configuration with Sealing Boot


U-Joint Detail

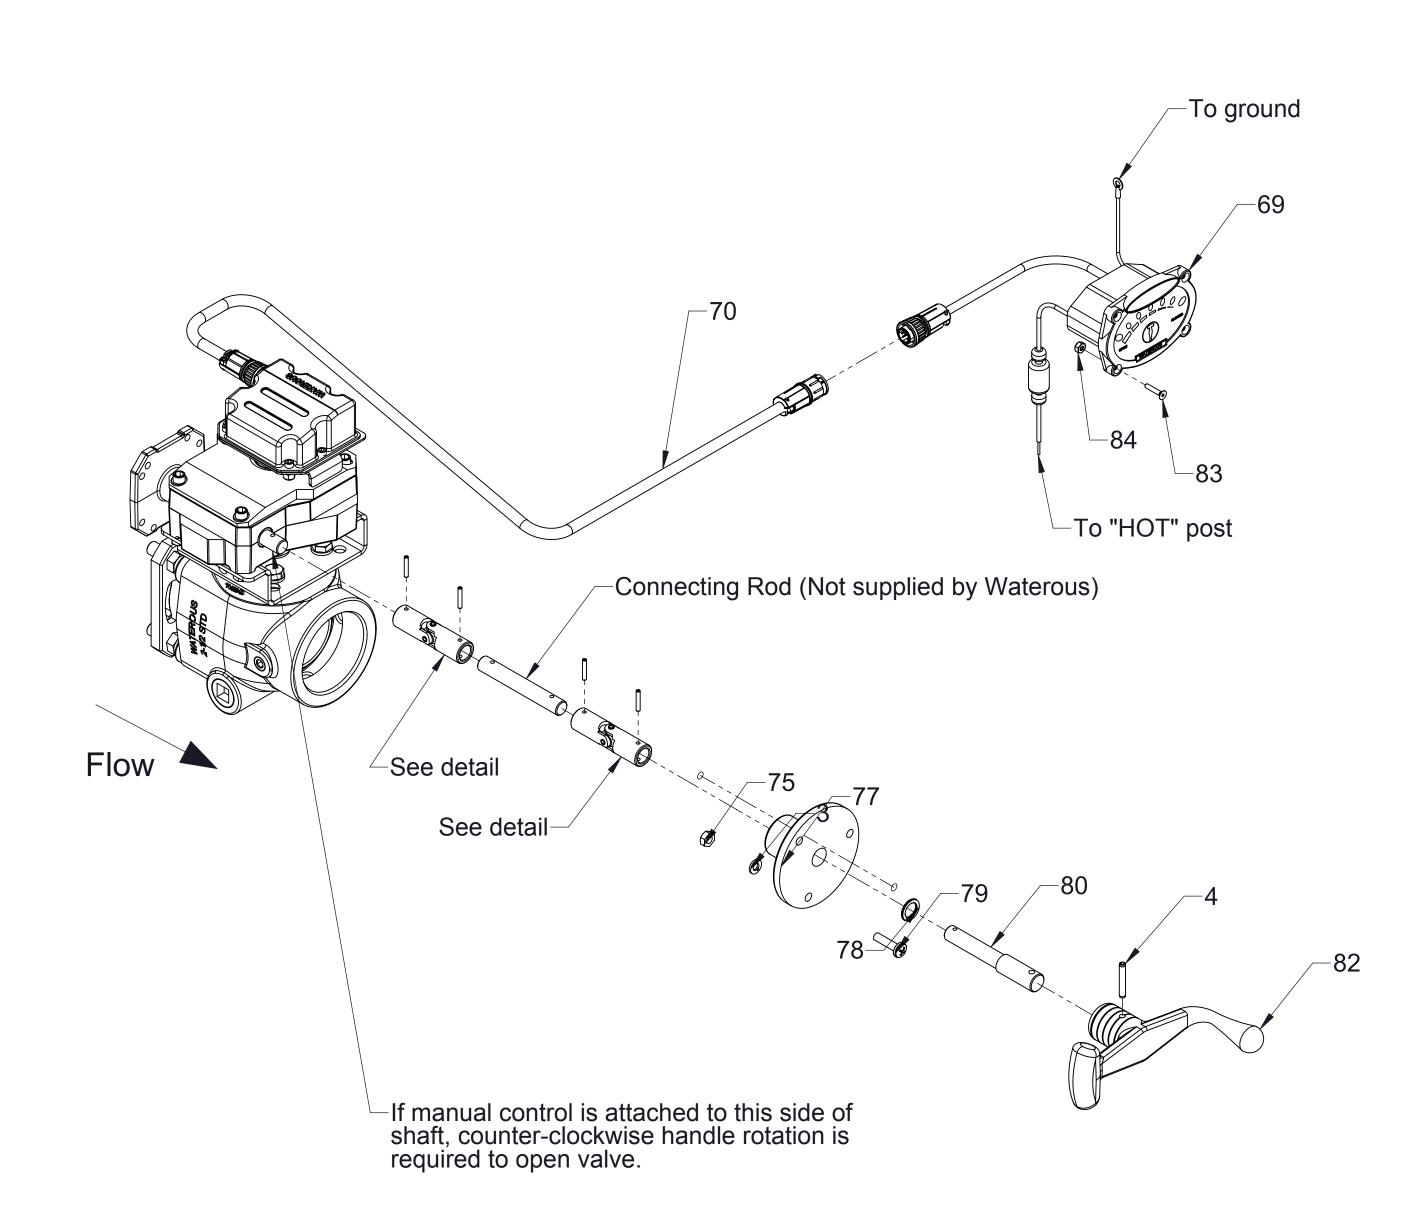

Valves built prior to November 6, 2006

Cables and Panel Components

Ref No.	Description	Ref No.	Description
3	Washer-Lock, 1/4 in	78	Bearing-Thrust
4	Pin-Spring, 3/16 x 1 1/4 in	79	Screw-Machine, Pan Hd, 1/4-20 x 1 in
15	Pin-Spirol, 1/8 x 3/4 in or 1/8 x 1 in	80	Shaft-Remote
69	LED Panel Wiring Assembly	82	Handle-Discharge Valve
70	Wire Assembly-Switch Extension	83	Screw-Machine, Flat Hd, Hex Soc, #6-32 x 3/4 in (Prior to November 6, 2006)
74	Joint-Universal	83	Control Panel Mounting Hardware (Includes (4) Socket Hd Screws, #6-32 x 3/4 in and (4) Nylok Nuts, #6-32) (After November 6, 2006)
75	Nut-Hex, Machine, 1/4-20	84	Nut-Hex, Nylok, #6-32 (Prior to November 6, 2006)
77	Body-Remote	85	U-Joint Boot (Includes cable ties)

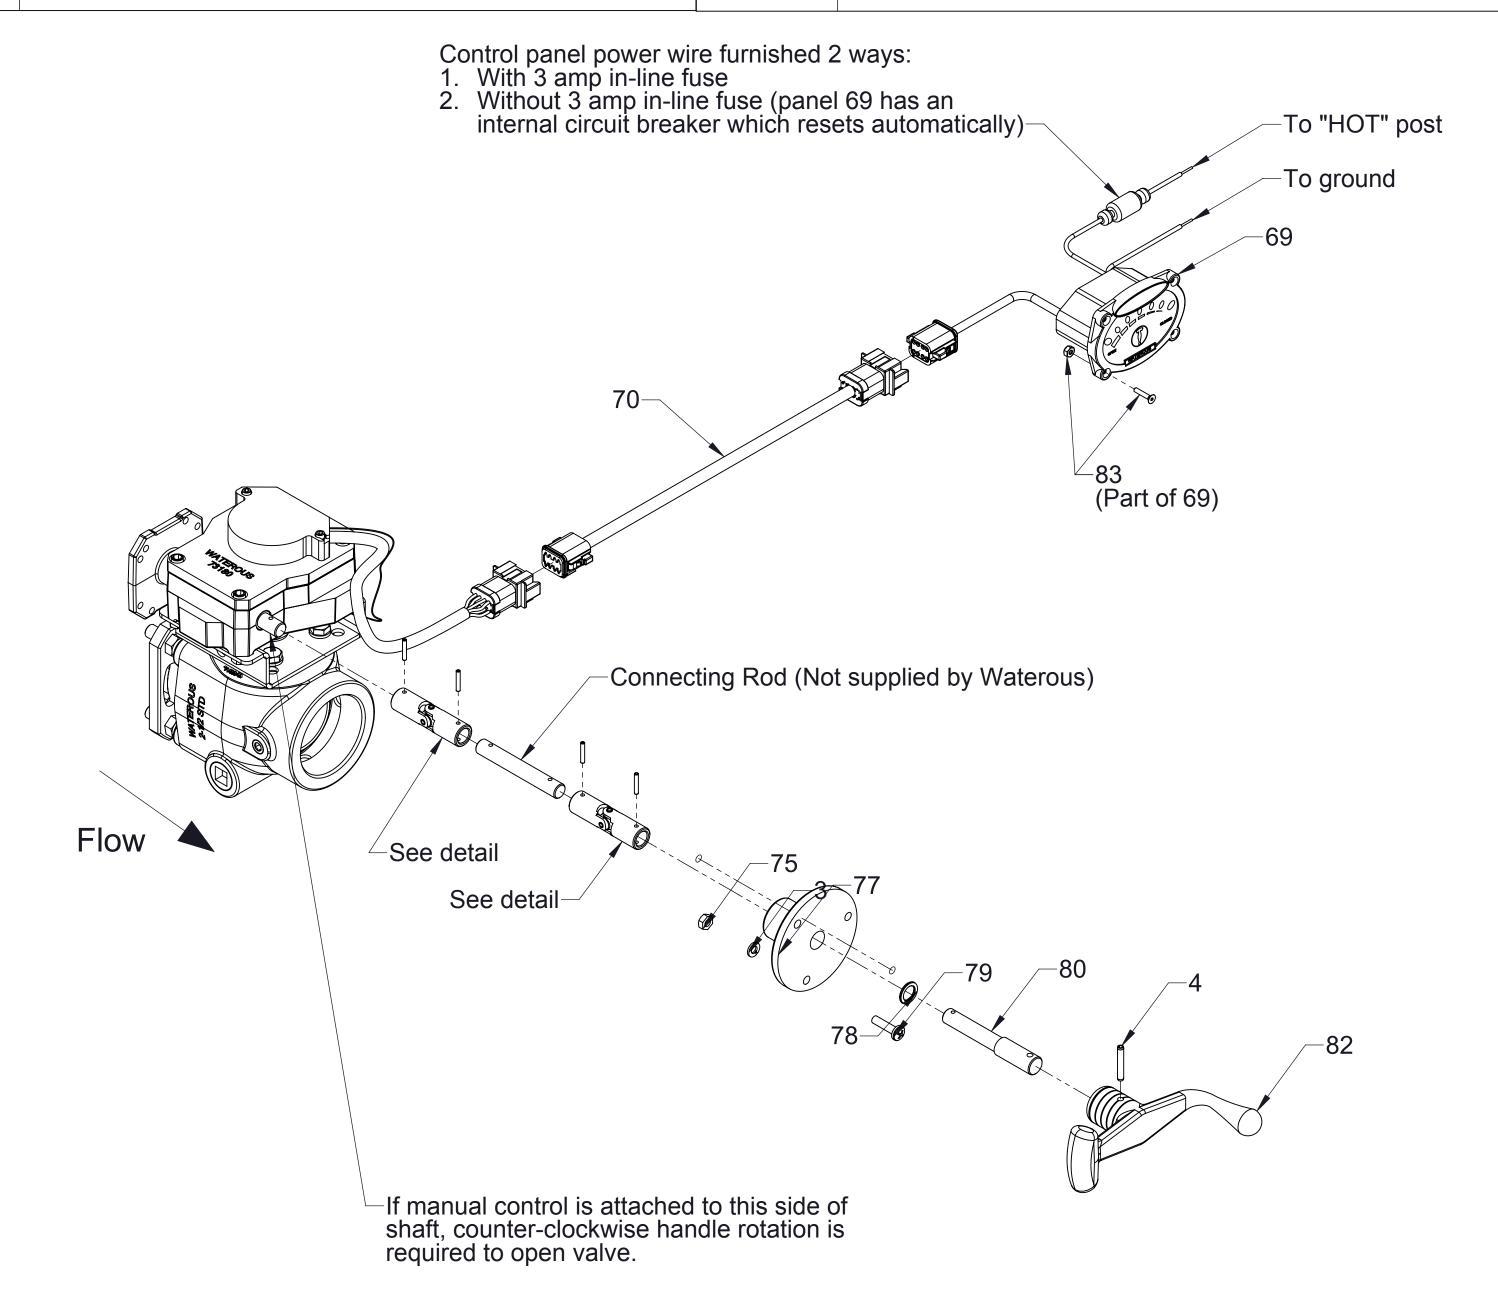


Valves built After November 6, 2006

Ref No.	Description
53	Rotary Encoder replacement Kit
86	Actuator Subassembly
87	Valve and Actuator Subassembly


53 Rotary Encoder Replacement Kit

See encoder details Attach ground wire under head of screw 86 Actuator Subassembly

Encoder Details

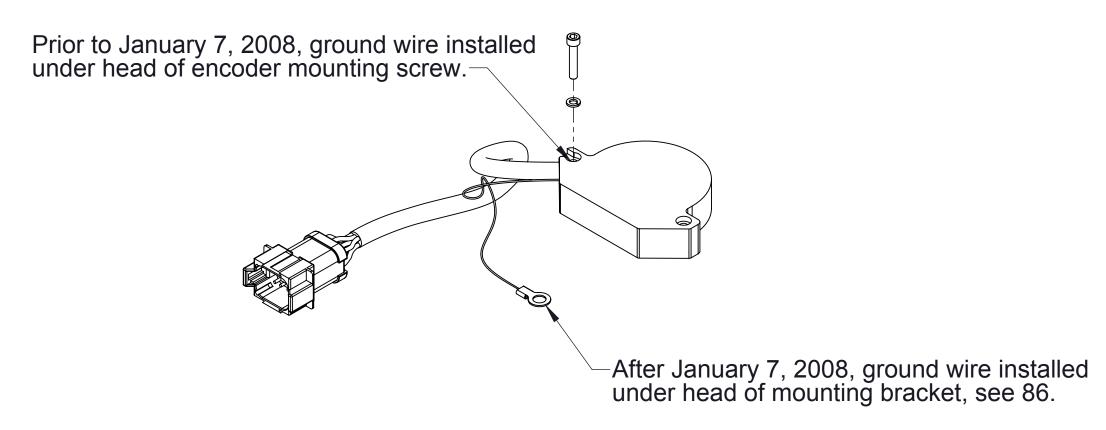



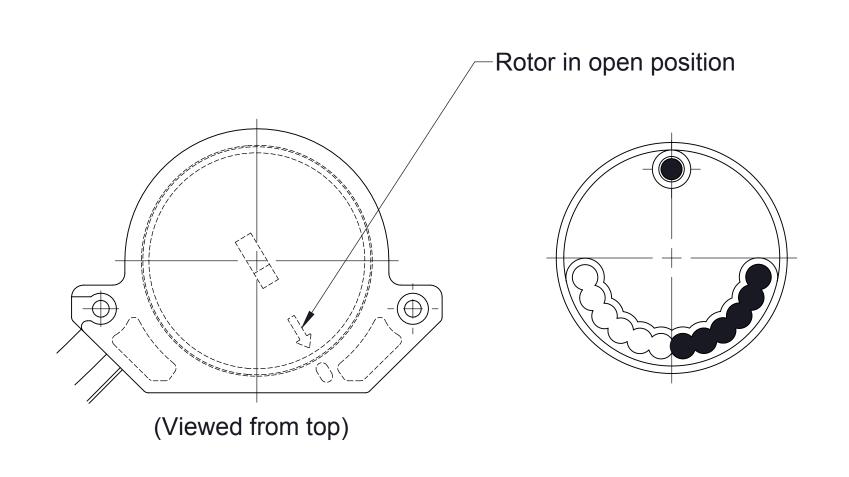

Rotor Position

Rotor Magnet Positions

87 Valve and Actuator Subassembly