



 Document Number
 Issue Date
 Rev. Date

 SPL83629
 09/01/16
 06/03/20

Tank to Pump Valve with Manual Rotary Actuator Service Parts List

Components	See Page
Tank to Pump Valve	2
Cables and Panel Components	3
Available Repair Subassemblies	4

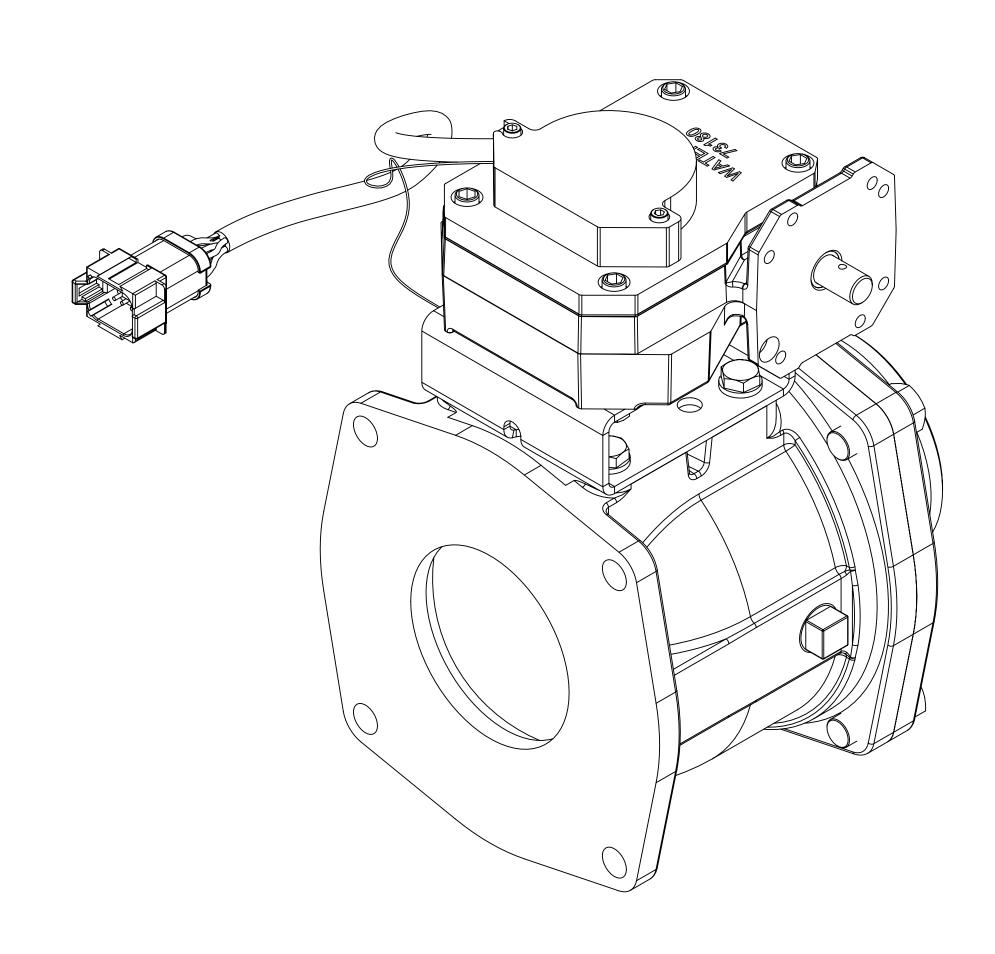

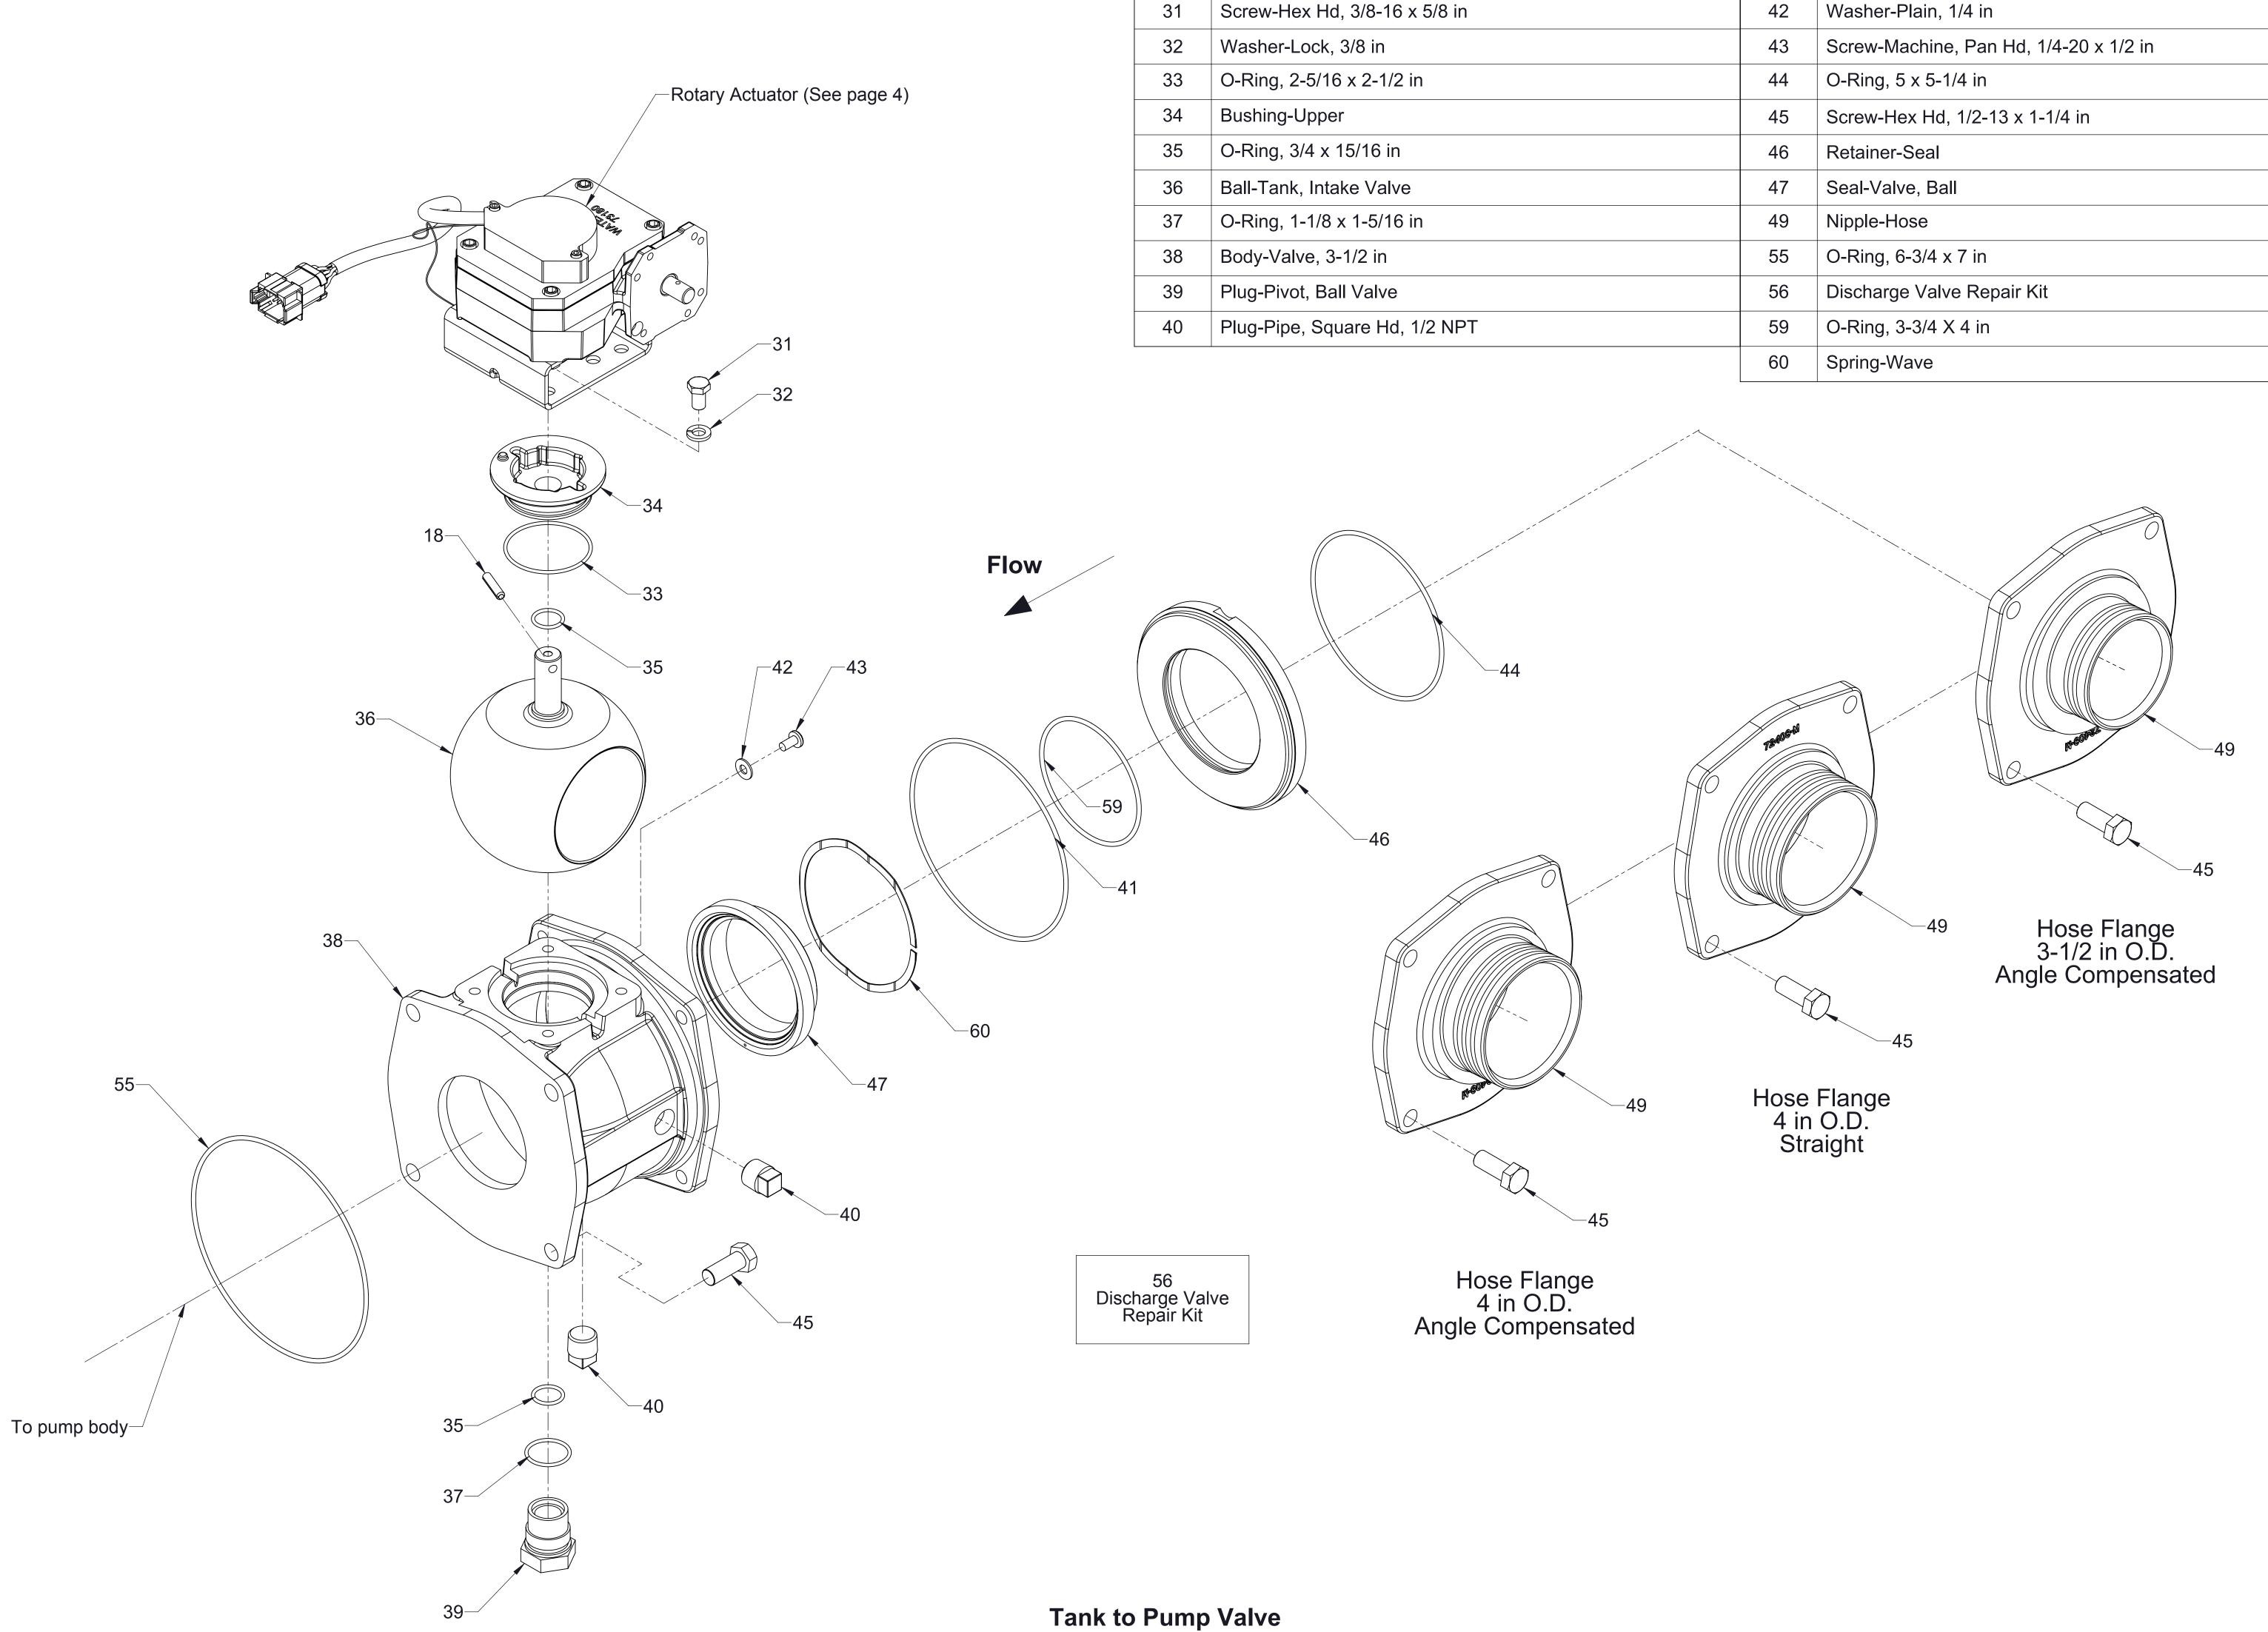

Ref No.

Pin-Spring, 1/4 x 1-1/8 in

Ref No.


O-Ring, 6 x 6-1/4 in

Washer-Plain, 1/4 in

Description

Description


Ref No.	Description	
3	Washer-Lock, 1/4 in	
4	Pin-Spring, 3/16 x 1 1/4 in	
15	Pin-Spirol, 1/8 x 3/4 in	Control panel power wire furnished two ways: 1. With 3 amp in-line fuse 2. Without 3 amp in-line fuse (Panel 69 has an internal circuit breaker which resets automatically)— ——To "HOT" post
69	LED Panel Wiring Assemblty	2. Without 3 amp in-line fuse (Panel 69 has an internal circuit breaker which resets automatically)———————————————————————————————————
70	Cable-Extension, Encoder	
74	Joint-Universal	To ground
75	Nut-Hex, Machine, 1/4-20	
77	Body-Remote	
78	Bearing-Thrust	
79	Screw-Machine, Pan Hd, 1/4-20 x 1 in	
80	Shaft-Remote	
82	Handle-Discharge Valve	
83	Control Panel Mounting Hardware (Includes (4) Socket Hd Screws, #6-32 x 3/4 in and (4) Nylok Nuts, #6-32)	
		83 (Part of 69)
		70—
		-15
		Connecting Rod (Not supplied by Waterous)
		\sim 15
	74	
	74	
Flow		
		74—
	If manual control	is attached to this side of shaft.
	counter-clockwise open valve	e handle rotation is required to
	•	
		\sim 80
		\sim 82
		Cables and Panel Components

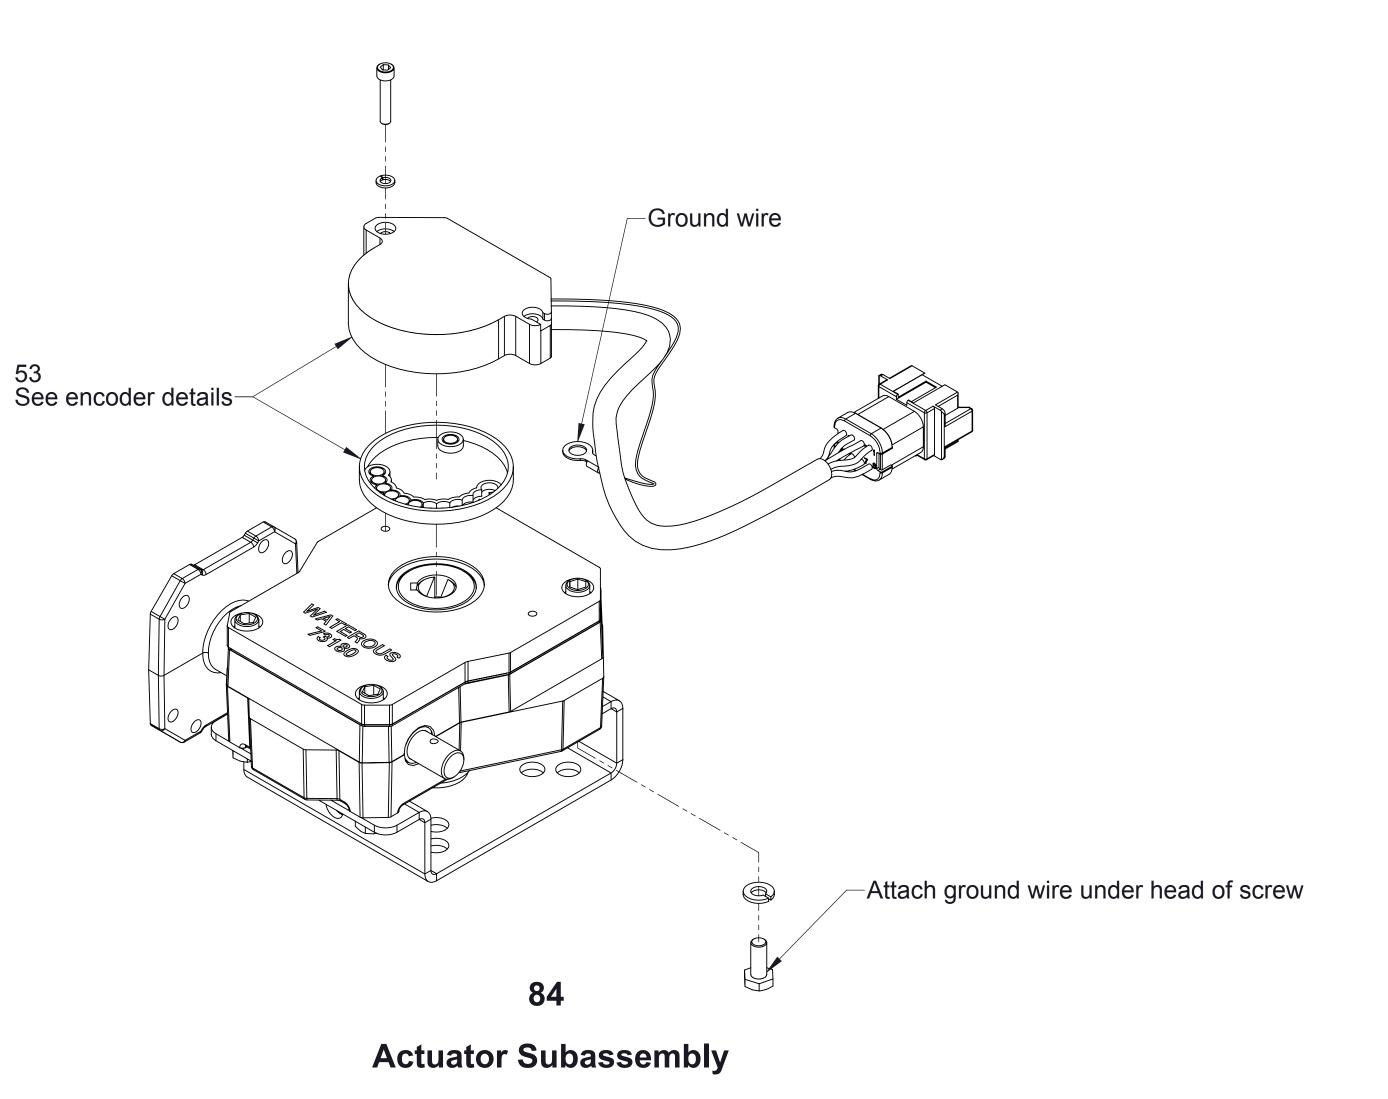



Ref No.	Description
53	Rotary Encoder Replacement Kit
84	Actuator Subassembly
85	Valve and Actuator Subassembly


53 Rotary Encoder Replacement Kit

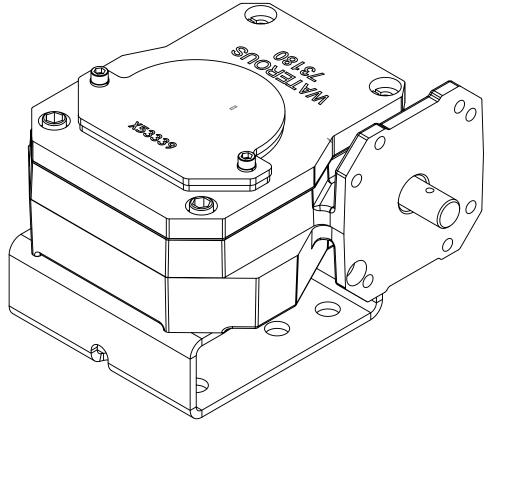


Actuator Subassembly

84

Configuration when optional Waterous control panel is not used

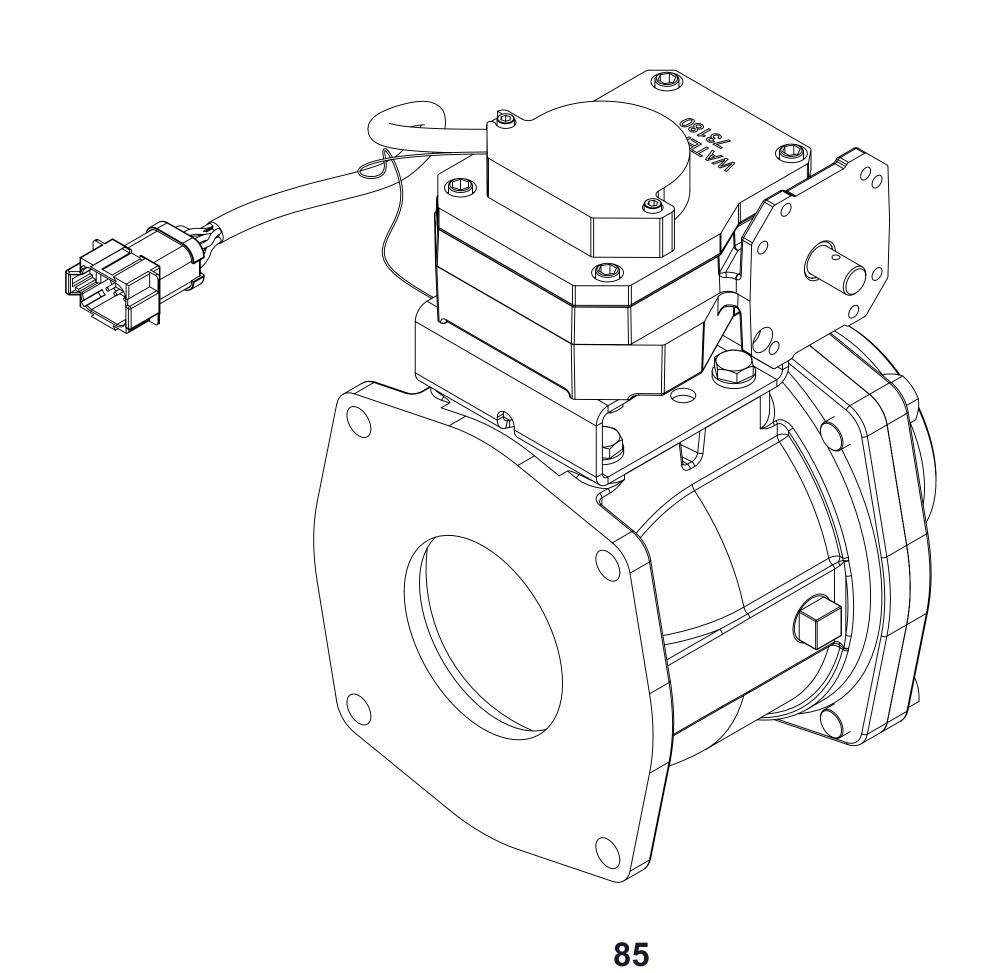

Valve and Actuator Subassembly

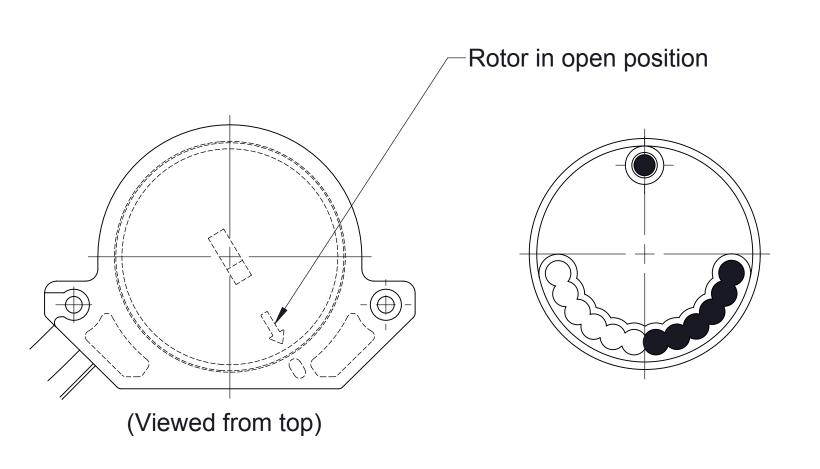

Rotor Position

Rotor Magnet Positions