



| | | |
|-----------------|-----------------|----------------|
| Document Number | Issue Date | Rev. Date |
| SPL81961 | 09/03/93 | 2/14/20 |

Tank to Pump Valve with Manual Actuator Service Parts List

Index:

| Component | See Page |
|------------------|-----------------|
| Complete Valve | 2, 3 |

Tank To Pump Valve

| REF. NO. | DESCRIPTION |
|----------|--------------------------------|
| NS1 | Valve Body |
| NS2 | Valve Ball |
| NS3 | Valve Seal |
| NS4 | Cover Plate or Bracket |
| NS5 | Hose Nipple |
| NS6 | Seal Retainer |
| NS7 | Detent Spring |
| NS8 | Upper Bushing |
| NS9 | Handle |
| NS10 | Pivot Plug |
| NS11 | Square Sleeve |
| NS12 | Wave Spring |
| NS14 | Hex Hd Screw, 3/8-16 x 1/2 in. |
| NS17 | Lock Washer, 3/8 in. |
| NS18 | O-ring, 3/4 x 15/16 in. |
| NS19 | O-ring, 1-1/8 x 1-5/16 in. |

| REF. NO. | DESCRIPTION |
|----------|--|
| NS20 | O-ring, 2-15/16 x 2-1/2 in. |
| NS21 | O-ring, 3-3/4 x 4 in. |
| NS22 | O-ring, 6 x 6-1/4 in. |
| NS23 | Spring Pin, 1/4 x 1-1/4 in., Stainless Steel |
| NS24 | O-ring, 6-3/4 x 7 in. |
| NS25 | Fender Washer, 3/8 in. |
| NS26 | Hex Hd Screw, 1/2-13 x 1-1/4 in. |
| NS29 | Tank to Pump Valve Subassembly |
| NS30 | Thrust Washer, 1-3/8 ID |
| NS31 | Stop Cam |
| NS32 | Pipe Plug, 1/2 in. |
| NS33 | O-ring, 5 x 5-1/4 in. |
| NS34 | Flat Washer, 1/4 in. |
| NS35 | Pan Hd Screw, 1/4-20 x 1/2 in. |
| NS99 | Repair Kit |

