

Technical Bulletin No. 136

F-2835 Illustration Update

Date: April 21, 2020

Effective: Immediately

The illustration on page 90 of the *F-2835 80-P, 140-P, and 200-P PTO CAFS Compressor Kit* instruction was updated to the illustration below.

Safety

Introduction

Product Overview

Installation


Operation

Maintenance

Troubleshooting

Warranty

Installing the PMC Hoses—80-P, 140-P, and 200-P

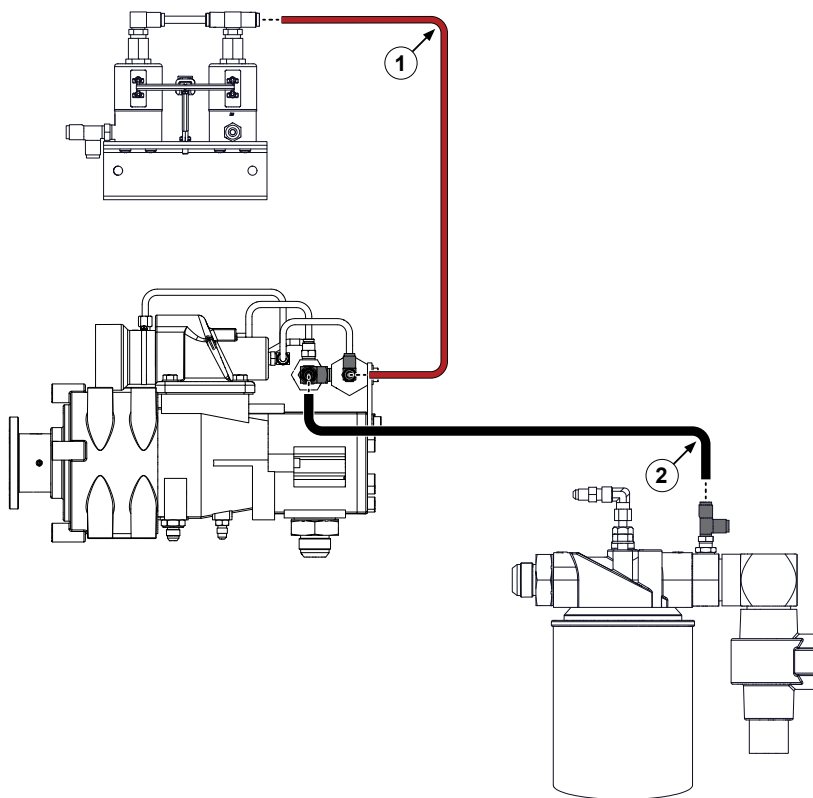

Use the illustration and instructions to install the PMC hose.

- 1 Install the red air brake hose between the auto-sync solenoid assembly and the PMC assembly.
- 2 Install the black air brake hose between the air/oil separator and the PMC assembly.